





REMOTE CONTROL

Synchronization


Synchronizing the remote control with the decoder

1. Use your TV remote control to select the decoder's HDMI port in the "Sources" menu.
2. Point the new remote control at the set-top box.
3. Hold down the OK and APPS buttons simultaneously for 5 seconds. Release both keys. A screen will appear. Again, hold down the OK and APPS keys simultaneously for 5 seconds. Release both keys and a message will appear at the bottom of the screen indicating successful pairing.
4. Follow the instructions on the new screen. Click on start, and the device will detect the TV model. The TV's volume control and power buttons will synchronize.

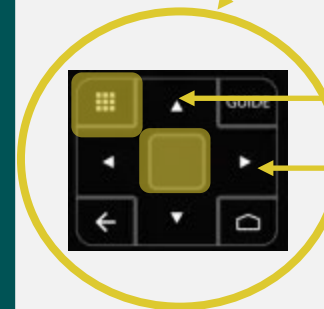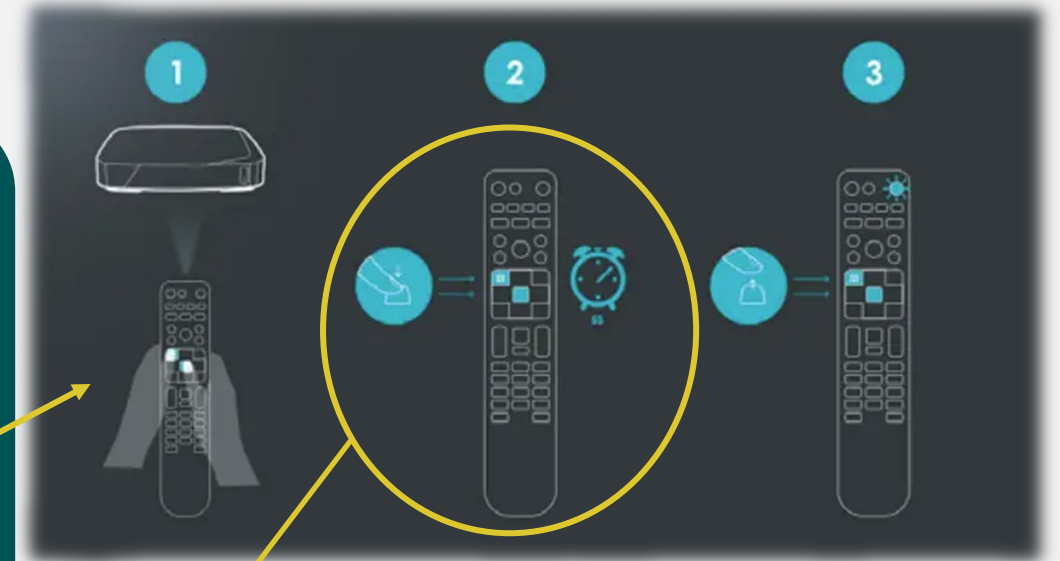


Application button (**APPS**)

OK button

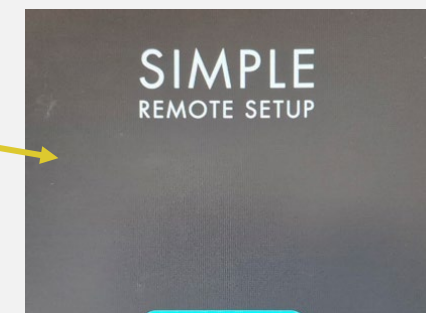

REMOTE CONTROL

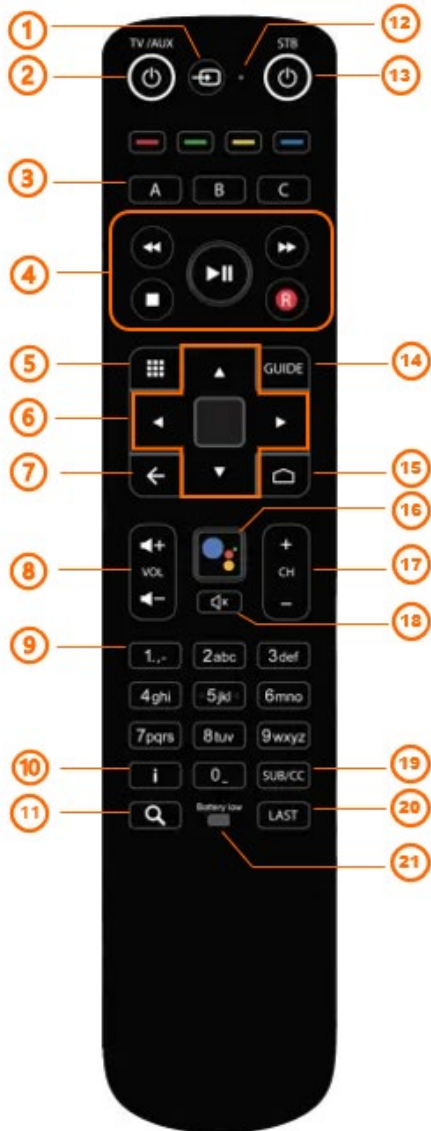


*Menus A, B and voice control

- **A button:** Opens the navigation menu at the bottom of your screen.
- **B button:** This takes you directly to the recording's menu.
- **Voice Command:** Activates the Google Assistant to access the decoder's applications. It can only be used outside the Fibre Argenteuil environment. For more information, please visit assistant.google.com.

Remote control functions for decoder control

1. Select TV input source.
2. Switch the TV on and off.
3. Shortcut for certain menus*.
4. Control recording and delay mode.
5. Access application menu.
6. Navigate menu and confirm.
7. Exit menus.
8. Adjust TV volume.
9. Select a channel or enter text.
10. Get detailed description of TV content.
11. Search for content.
12. Microphone.
13. Switch decoder on and off.
14. Access channel guide.
15. Access Android TV main menu.
16. Activate voice command*.
17. Navigate channels.
18. Mute volume.
19. Activate / deactivate subtitles.
20. Return to previous channel.
21. View battery status

The remote control and its main buttons

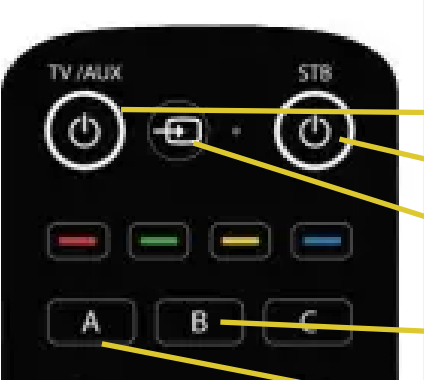

- Switch the TV on and off.
- TV input source.
- Decoder on/off

Shortcut to record menu.

Go to page menu*.


*When you're listening live and press the "A" button, a menu appears at the bottom of your TV:



*When you are in the channel guide and press the "A" button, a different menu opens at the bottom of your TV:



*When you are in a recording or replay mode, pressing the "A" key displays a menu with the progress bar of your content. This allows you to view your current position in the playback and navigate more quickly.

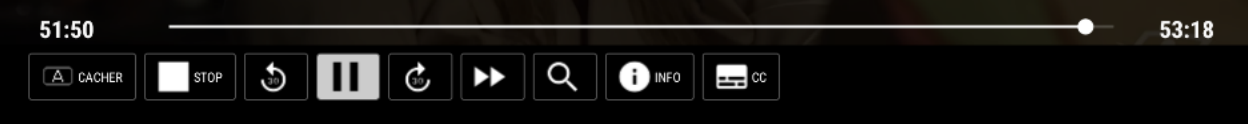

Manage recordings or content, allowing you to pause, advance, rewind or stop.



Navigation arrows to browse the guide

To exit a menu.